

BCN3D CLOUD

User Guide



BCN3D CLOUD

User Guide

If the registration link is correct this page will appear. After submitting the form an email will be sent in order to verify it. Once it is verified your printer will be registered to the cloud.



EN

¡Welcome to the BCN3D experience and thanks to trust in our products! Register your 3D printer to stay updated and enjoy the best user experience.

[Already registered? Sign In](#)

User information

Email *

Username *

Fullname *

Password * **Confirm Password ***

Printer serial number *

Personal information

When did you start using this printer? *

This printer will be used for *

Application *


Industry *

Country *


BCN3D CLOUD

User Guide

Now a cloud account has been created with the information you have provided. Go to cloud.bcn3d.com and use the email and the password that you have set before.

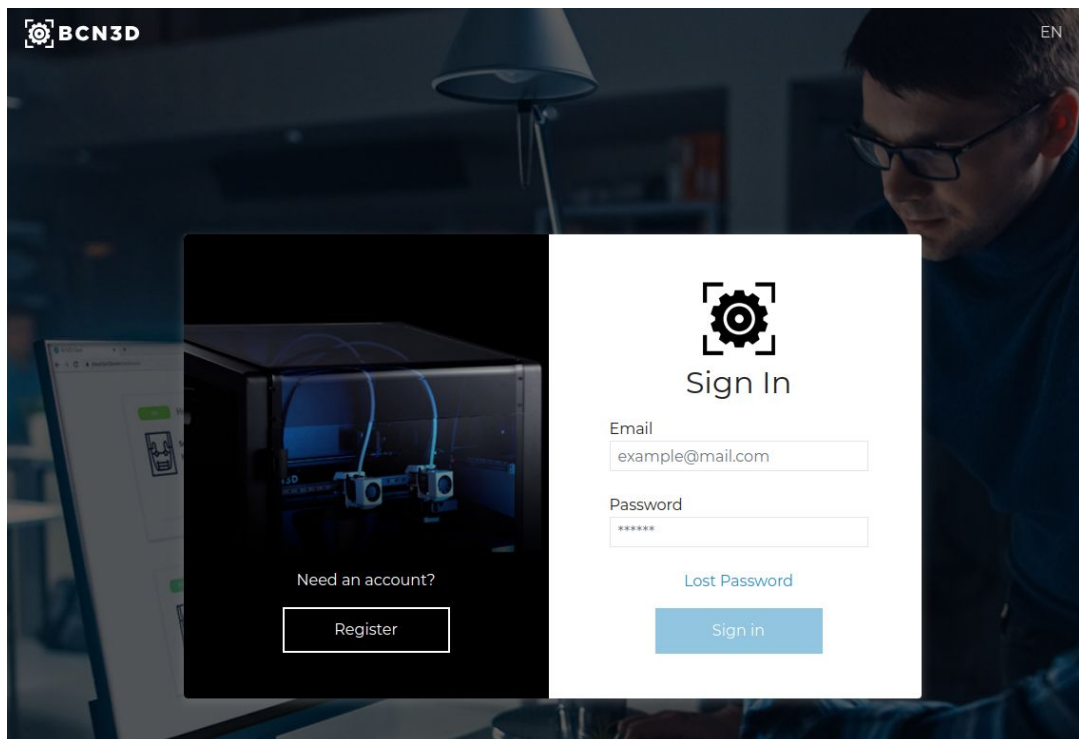

If the credentials are correct you will be redirected to your dashboard, where you will see your printer.

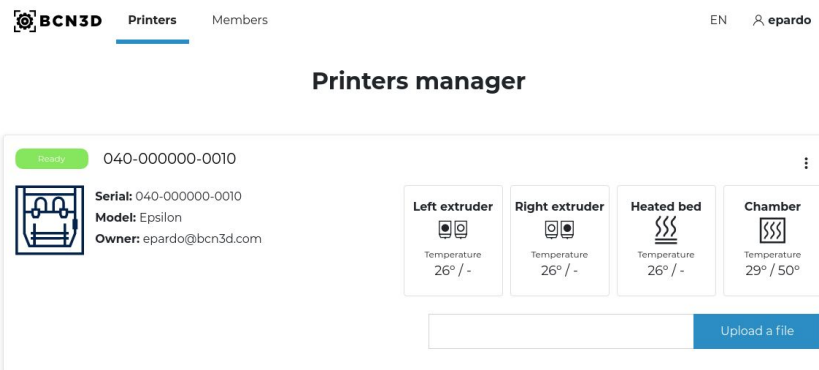

BCN3D CLOUD

User Guide



The default name of the printer is the serial number, but you can change it by clicking on it.

The state of the printer, you can only send files print when it is on Ready state.

Target temperature. Right now it doesn't have a target.

The screenshot shows the 'Printers manager' interface. At the top left is the BCN3D logo and 'Printers' tab. At the top right are 'EN' and 'epardo'. The main area displays printer details for a printer with serial number '040-000000-0010', model 'Epsilon', and owner 'epardo@bcn3d.com'. Below this are four temperature control cards: 'Left extruder' (26° / -), 'Right extruder' (26° / -), 'Heated bed' (26° / -), and 'Chamber' (29° / 50°). An 'Upload a file' button is located at the bottom right. Blue lines connect text annotations to these elements: 'Ready' state, printer name, temperature, and the upload button.

Printer name

Temperature

Click the button to upload a file to print or drag and drop the file.

As the user who has registered the printer you can deleted whenever you want. Once it is deleted you can register it again from the printer display:


Utilities -> Printer Setup -> Register Printer.

This screenshot shows a close-up of the printer control interface. It features four temperature control cards: 'Left extruder', 'Right extruder', 'Heated bed', and 'Chamber', each showing a temperature of '0° / -'. A three-dot menu icon is visible in the top right corner, and a 'Delete printer' button with a trash icon is overlaid on the interface.

BCN3D CLOUD

User Guide

In the top right corner you can change the language, edit your user account and logout.

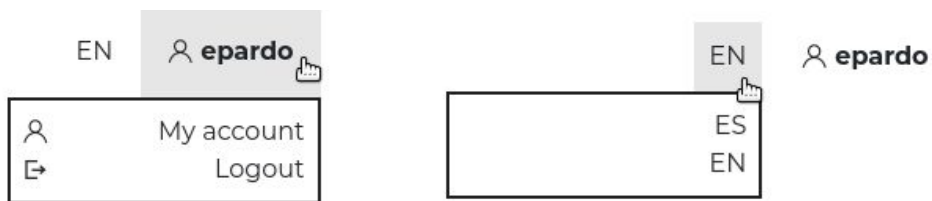

If you want someone else to use your printer you can go to the members tab on the top bar and invite him. Click on the invite button and write his email.

When you invite a person you are sharing all your dashboard. It means that if you register a printer in the future the previously invited users will also see that printer.

